



Quickly guide.
Programming guide for PRO5100 serial .


Shared by @William Dominguez Facebook group

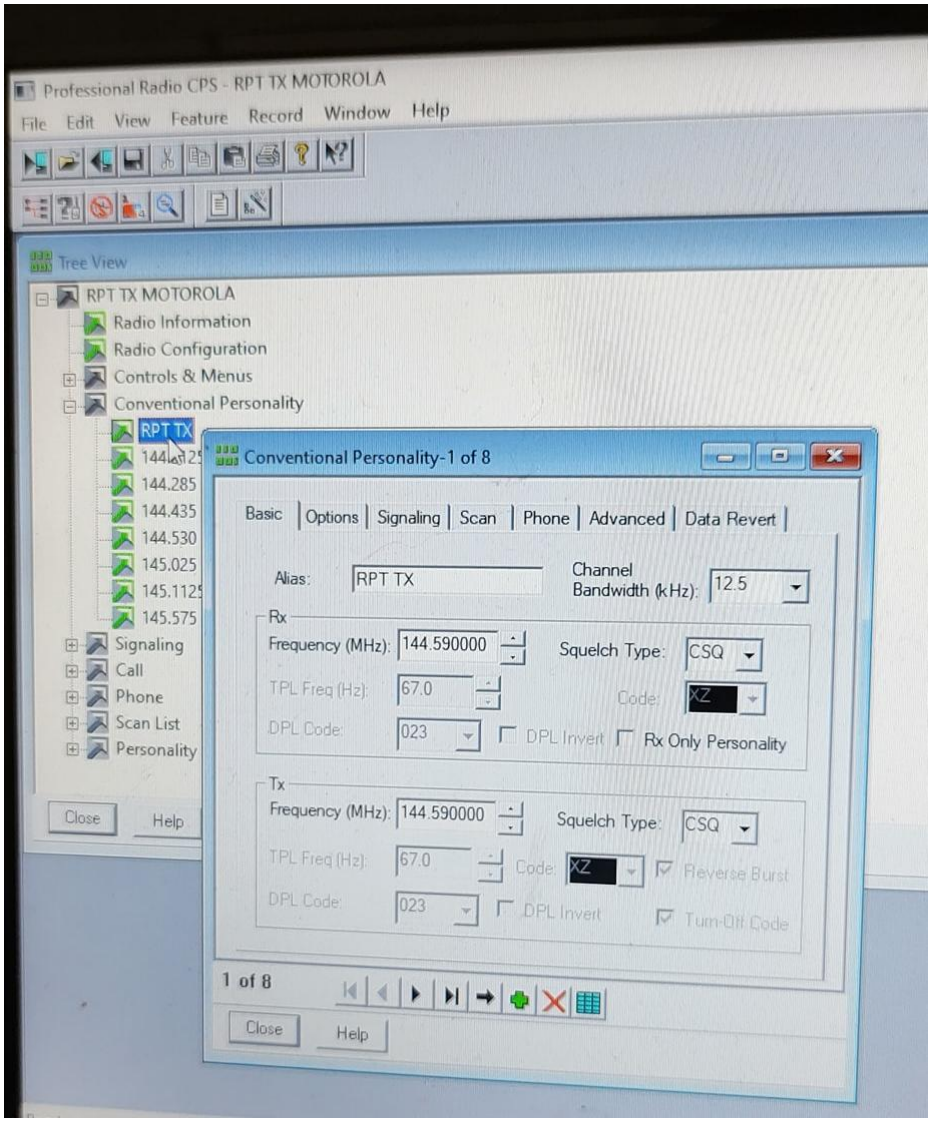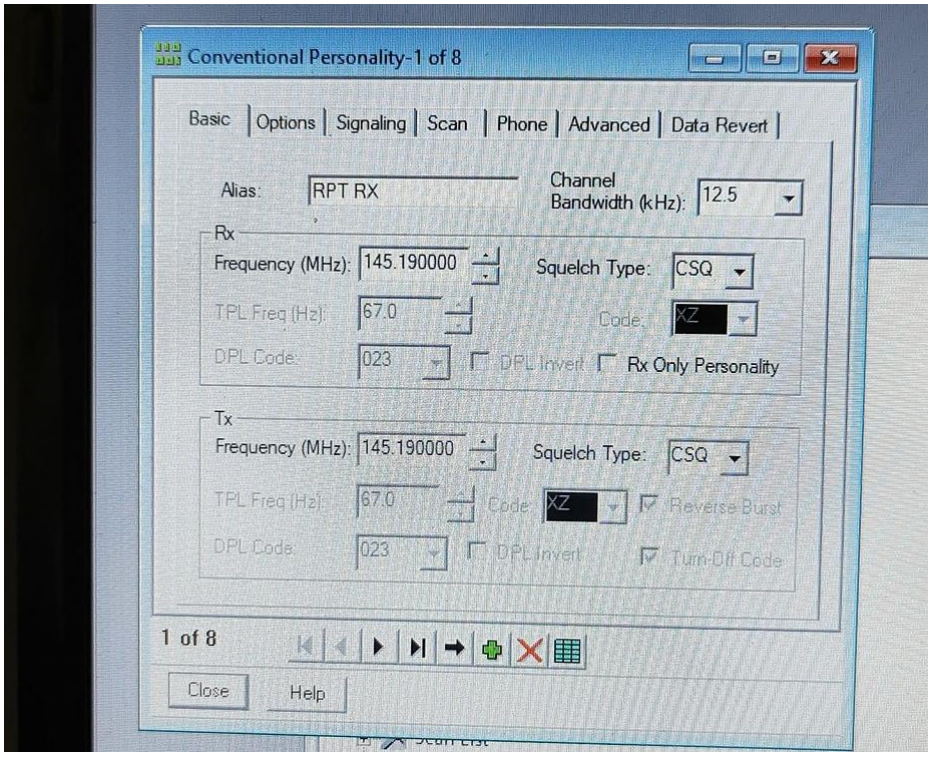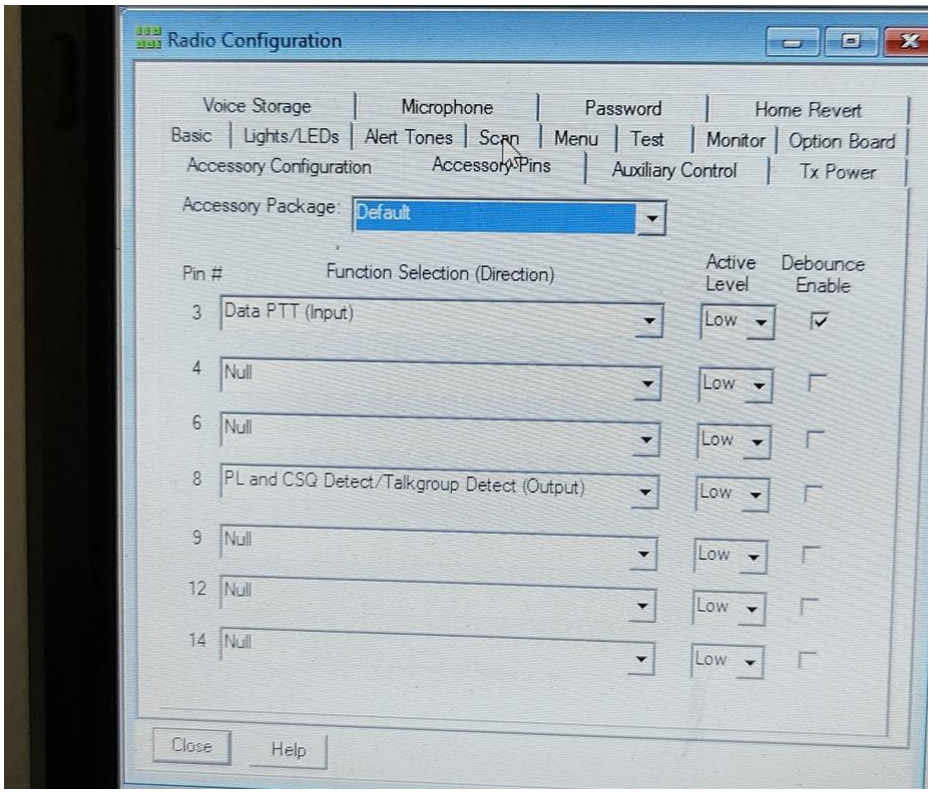



Conventional Personality-1 of 8
Basic
Options
Signaling
Scan
Phone
Advanced
Data Revert
Alias:
RPT RX
Channel Bandwidth (kHz):
12.5
Rx
Frequency (MHz):
145.190000
Squelch Type:
CSQ
TPL Freq (Hz):
67.0
Code:
XZ
DPL Code:
023
DPL Invert
Rx Only Personality
Tx
Frequency (MHz):
145.190000
Squelch Type:
CSQ
TPL Freq (Hz):
67.0
Code:
XZ
Reverse Burst
DPL Code:
023
DPL Invert
Turn-Off Code
1 of 8
Close
Help


Radio Configuration
Voice Storage
Microphone
Password
Home Revert
Basic
Lights/LEDs
Alert Tones
Scan
Menu
Test
Monitor
Option Board
Accessory Configuration
Accessory Pins
Auxiliary Control
Tx Power
Accessory Package:
Default
Pin #
Function Selection (Direction)
Active Level
Debounce Enable
3
Data PTT (Input)
Low
4
Null
Low
6
Null
Low
8
PL and CSQ Detect/Talkgroup Detect (Output)
Low
9
Null
Low
12
Null
Low
14
Null
Low
Close
Help

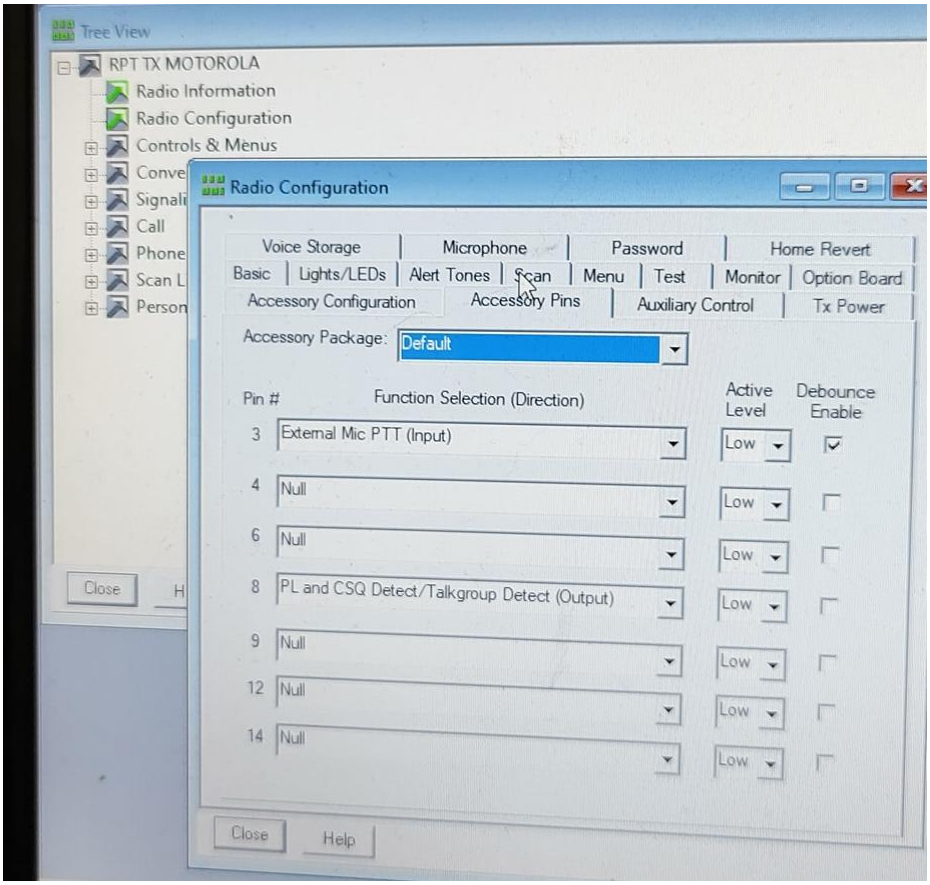

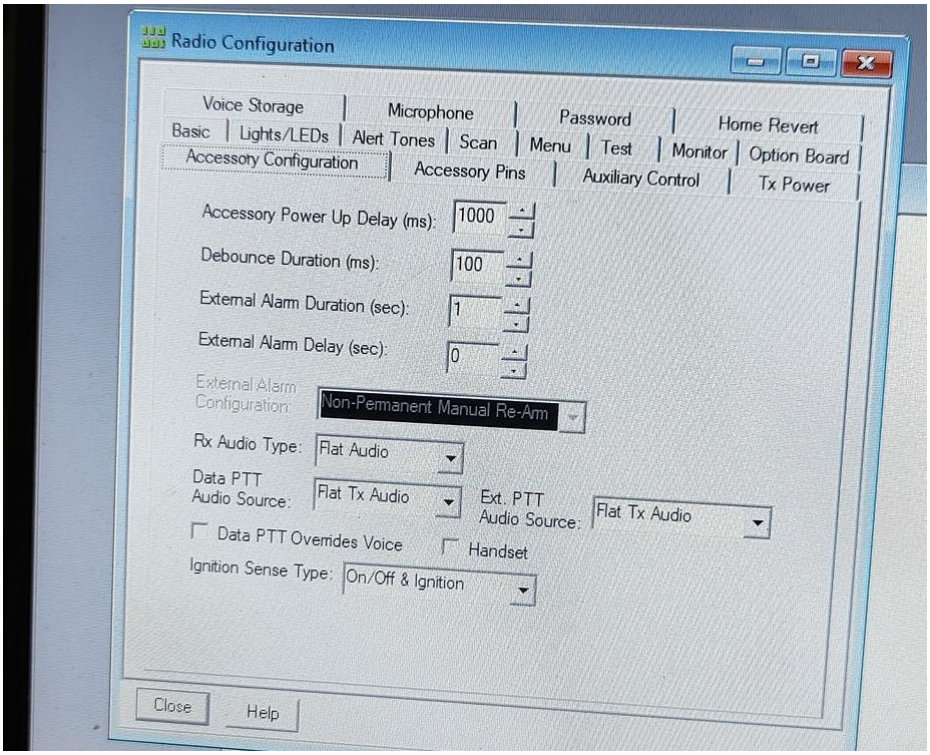

MMDVMHost setting in Pi-Star, WPSD Dashboard

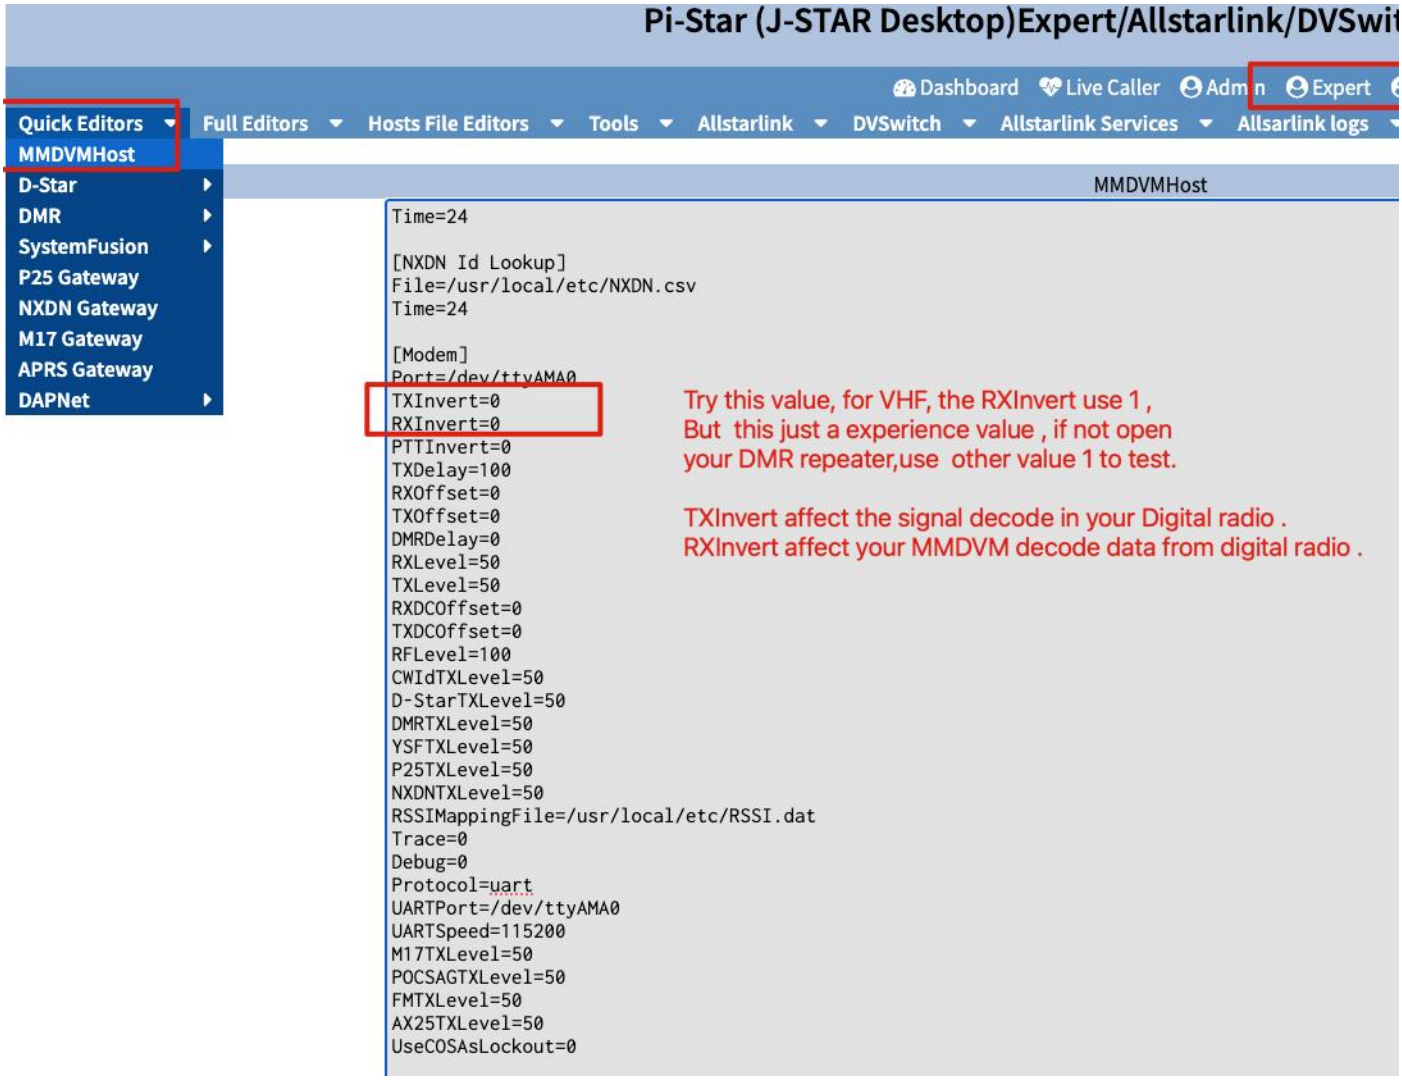

73 DE BI7JTA@gmail.com !